



```

A1 Gnuicap directive .include sim/models/bf199.lib
A2 Gnuicap directive .include sim/models/bfr91a_worst.lib
A3 Gnuicap directive .include sim/models/bfr91a_best.lib
A4 Gnuicap directive .include sim/models/bfr90.lib
A5 Gnuicap directive .include sim/models/bfr91.lib
A6 Gnuicap options numdgt=9 out=10000 clobber norstray
A7 Gnuicap directive .print ac zm(me1) zr(me1) zi(me1) zm(me2) zr(me2) zi(me2) zm(me3) zr(me3) zi(me3) zm(me4) zr(me4) zi(me4) zm(me5) zr(me5) zi(me5)
A8 Gnuicap directive .op
A9 Gnuicap directive .ac 1k 100Meg Dec 20 >sim/199_cap.data Basic Quiet

```

### BF199 and BFR91A Worst Case Emitter Capacity

TITLE		BF199 and BFR91A Worst Case Emitter Capacity	
FILE:	To be released under GFDL	REVISION:	
PAGE	1 OF 1	DRAWN BY:	Clock