



- A1 Gnuicap directive .include sim\models\bfr90\_worst.lib
- A10 Gnuicap directive .include sim\models\bfr90\_best.lib
- A11 Gnuicap directive .include sim\models\bfr91\_worst.lib
- A12 Gnuicap directive .include sim\models\bfr91\_best.lib
- A13 Gnuicap directive .include sim\models\bfr91a\_worst.lib
- A2 Gnuicap directive .include sim\models\bfr91a\_best.lib
- A3 Gnuicap options numdgt=9 out=10000 clobber rstray
- A4 Gnuicap directive .print ac imdB(L15) imdB(L55) ip(L15) ip(L55)
- A5 Gnuicap directive .op
- A6 Gnuicap directive .ac 11k 9.5G Dec 50 >sim\frontend.data Basic Quiet
- A7 Gnuicap directive .print ac im(C3) im(G1) m(C7) im(L15) im(G2) im(L53)
- A8 Gnuicap directive .ac 10Meg >sim\frontend2.data Basic Quiet
- A9 Gnuicap directive .ac 10Meg >sim\frontend2.data Basic Quiet

BFR90, 91, and 91A input stability			
TITLE			
FILE	To be released under GFDL		REVISION: 20090220
PAGE	1	OF	1
	DRAWN BY:		Click