



- A1 Gnuicap directive :include sim/models/bfr90\_worst.lib
- A10 Gnuicap directive :include sim/models/bfr90\_best.lib
- A11 Gnuicap directive :include sim/models/bfr91\_worst.lib
- A12 Gnuicap directive :include sim/models/bfr91\_best.lib
- A13 Gnuicap directive :include sim/models/bfr91a\_worst.lib
- A2 Gnuicap directive :include sim/models/bfr91a\_best.lib
- A3 Gnuicap options numdgt=9 out=10000 clobber rstray
- A4 Gnuicap directive :print ac imdb(L15) imdb(L55) ip(L15) ip(L55)
- A5 Gnuicap directive .op
- A6 Gnuicap directive :ac 1 1k 9.5G Dec 50 >sim/frontend.data Basic Quiet
- A7 Gnuicap directive :print ac im(C3) im(G1) im(C7) im(L15) im(C2) im(L53)
- A8 Gnuicap directive :ac 10Meg >sim/frontend2.data Basic Quiet
- A9 Gnuicap directive :ac 10Meg >sim/frontend2.data Basic Quiet

BFR90, 91, and 91A input stability			
TITLE			
FILE	To be released under GFDL	REVISION:	20090220
PAGE	1 OF 1	DRAWN BY:	Clock