



- A1 Gnuicap directive .include sim/models/bfr90_worst.lib
- A2 Gnuicap directive .include sim/models/bfr91_worst.lib
- A3 Gnuicap directive .include sim/models/bfr91_best.lib
- A4 Gnuicap directive .include sim/models/bfr91a_worst.lib
- A5 Gnuicap directive .include sim/models/bfr91a_best.lib
- A6 Gnuicap options numdgi=0 osc=10000 clobber stray
- A7 Gnuicap directive .print ac imdb(L17) imdb(L19) imdb(L59) imdb(L61) imdb(L101) imdb(L103) ip(L17) ip(L19) ip(L59) ip(L61) ip(L101) ip(L103)
- A8 Gnuicap directive .op
- A9 Gnuicap directive .ac 11k 9.5G Dec 50 >sim/miller91.data Basic Quiet
- A10 Gnuicap directive .include sim/models/bfr90_best.lib

LF 300p intersage / 13.6n degenerator

BFR90, 91, and 91A input stability

TITLE	
FILE	To be released under GFDL
REVISION	20091023
PAGE	1 OF 1
DRAWN BY	Cluck