



- A1 Gnuicap directive .include sim/models/bfr90\_worst.lib
- A2 Gnuicap directive .include sim/models/bfr91\_worst.lib
- A3 Gnuicap directive .include sim/models/bfr91\_best.lib
- A4 Gnuicap directive .include sim/models/bfr91a\_worst.lib
- A5 Gnuicap directive .include sim/models/bfr91a\_best.lib
- A6 Gnuicap options numdgt=0 out=10000 clobber stray
- A7 Gnuicap directive .print ac imdb(L17) imdb(L19) imdb(L59) imdb(L61) imdb(L101) imdb(L103) ip(L17) ip(L19) ip(L59) ip(L61) ip(L101) ip(L103)
- A8 Gnuicap directive .op
- A9 Gnuicap directive .ac 11k 9.5G Dec 50 >sim/miller91.data Basic Quiet
- A10 Gnuicap directive .include sim/models/bfr90\_best.lib

BFR90, 91, and 91A input stability			
TITLE			
FILE	To be released under GFDL	REVISION	20081023
PAGE	1 OF 1	DRAWN BY	Clock