



```

A1 Gnuicap directive .include sim/models/bfr90_worst.lib
A2 Gnuicap directive .include sim/models/bfr91_worst.lib
A3 Gnuicap directive .include sim/models/bfr91_best.lib
A4 Gnuicap directive .include sim/models/bfr91a_worst.lib
A5 Gnuicap directive .include sim/models/bfr91a_best.lib
A6 Gnuicap options numdgt=0 ous=10000 clobber nstray
A7 Gnuicap directive .print ac:zr(V9) zr(V10) zr(V23) zr(V24) zr(V37) zr(V38) zi(V9) zi(V10) zi(V23) zi(V24) zi(V37) zi(V38)
A8 Gnuicap directive .op
A9 Gnuicap directive .ac 150k 9.9G Dec 50 >sim/stab90_data Basic Quiet
A10 Gnuicap directive .include sim/models/bfr90_best.lib

```

BFR90, 91, and 91A input stability			
TITLE			
FILE	To be released under GFDL	REVISION	20091024
PAGE	1	OF	1
DRAWN BY	Clock		