



- A1 Gnuicap directive .include sim/models/bfr90_worst.lib
- A2 Gnuicap directive .include sim/models/bfr91_worst.lib
- A3 Gnuicap directive .include sim/models/bfr91a_best.lib
- A4 Gnuicap directive .include sim/models/bfr91a_worst.lib
- A5 Gnuicap directive .include sim/models/bfr91a_best.lib
- A6 Gnuicap options numdgt=8 out=10000 clobber rstray
- A7 Gnuicap directive .print ac:zr(V9) zr(V10) zr(V23) zr(V24) zr(V37) zr(V38) zi(V9) zi(V10) zi(V23) zi(V24) zi(V37) zi(V38)
- A8 Gnuicap directive .op
- A9 Gnuicap directive .ac 150k 9.9G Dec 50 >sim/stab90.data Basic Quiet
- A10 Gnuicap directive .include sim/models/bfr90_best.lib

BFR90, 91, and 91A input stability			
TITLE			
FILE	To be released under GFDL	REVISION:	20081024
PAGE	1 OF 1	DRAWN BY:	Clock