



- A1 Gnuicap directive .include sim/models/bfr90_worst.lib
- A2 Gnuicap options numdgt=9 out=10000 clobber rstray
- A3 Gnuicap directive .print tran (i(I) v(V1) v(V5) i(V9) i(V10) i(V13) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29))
- A4 Gnuicap directive .op
- A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim\tran90.data Basic Quiet

BFR90 transient response			
TITLE	Licensed under GFDL		REVISION: 20081024
FILE	1	OF	DRAWN BY: Clock
PAGE	1	OF	1