



- A1 Gnuicap directive .include sim/models/bfr91_worst.lib
- A2 Gnuicap options numdgt=9 out=10000 clobber rstray
- A3 Gnuicap directive .print tran (i1) v(i1) (V5) (V9) (V10) (V13) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29)
- A4 Gnuicap directive .op
- A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim/tran91.data Basic Quiet

BFR91 transient response			
TITLE	Released under GFDL		
FILE	1	OF	1
PAGE	1	OF	1
REVISION:	20081024		
DRAWN BY:	Clock		