



```

A1 Gnuicap directive .include sim/models/bfr91_worst.lib

A2 Gnuicap options numdgt=9 out=10000 clobber rstray

A3 Gnuicap directive .print tran (I1) V(I1) (V5) (V6) (V9) (V13) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29)

A4 Gnuicap directive .op

A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim/TRAN91.data Basic Quiet
  
```

TITLE		BFR91 transient response	
FILE	Released under GFDL	REVISION	20081024
PAGE	1 OF 1	DRAWN BY	Click