



- A1 Gnuicap directive .include sim/models/bfr91\_worst.lib
- A2 Gnuicap options numdgt=9 out=10000 clobber rstray
- A3 Gnuicap directive .print tran (i1) v(i1) (v5) (v9) (v10) (v13) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29)
- A4 Gnuicap directive .op
- A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim/TRAN91.data Basic Quiet

<b>BFR91 transient response</b>			
TITLE			
FILE	Released under GFDL	REVISION:	20081024
PAGE	1 OF 1	DRAWN BY:	Clock