



```

A1 Gnuicap directive .include sim\models\bfr91_worst.lib
A2 Gnuicap options numdgt=9 out=10000 clobber rstray
A3 Gnuicap directive .print tran (i1) v(i1) (v5) i(v5) (v13) v(R1) V(R11) V(R12) V(R20) V(R21) V(R29)
A4 Gnuicap directive .op
A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim\tran91.data Basic Quiet

```

TITLE				BFR91 transient response			
FILE	Released under GFDL			REVISION:	20081024		
PAGE	1	OF	1	DRAWN BY:	Clock		