



- A1 Gnuicap directive .include sim/models/bfr91a\_worst.lib
- A2 Gnuicap options numdgt=9 out=10000 clobber rstray
- A3 Gnuicap directive .print tran (i1) v(i1) ic(q1) ic(q3) ic(q4) ic(q6) ic(q7) ic(q9) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29) V(rsai1) V(rsai2) V(rsai3)
- A4 Gnuicap directive .op
- A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim\tran91a.data Basic Quiet

<b>BFR91A transient response</b>	
TITLE	
FILE	Released under GFDL
PAGE	1 OF 1
REVISION:	20081025
DRAWN BY:	Clock