



A1 Gnuicap directive .include sim/models/bfr91a_worst.lib

A2 Gnuicap options numdgt=9 out=10000 clobber rstray

A3 Gnuicap directive .print tran (i1) v(i1) ic(q1) ic(q3) ic(q4) ic(q6) ic(q7) ic(q9) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29) V(rsai1) V(rsai2) V(rsai3)

A4 Gnuicap directive .op

A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim\tran91a.data Basic Quiet

TITLE BFR91A transient response		
FILE	Released under GFDL	REVISION: 20081025
PAGE	1 OF 1	DRAWN BY: Clock