



```

A1 Gnuicap directive .include sim/models/bfr91a_worst.lib

A2 Gnuicap options numdgt=9 out=10000 clobber rstray

A3 Gnuicap directive .print tran (i1) v(i1) ic(q3) ic(q4) ic(q6) ic(q7) ic(q9) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29) V(rs12) V(rs13))

A4 Gnuicap directive .op

A5 Gnuicap directive .transient 0 1u 100p skip 10 >sim\tran91a.data Basic Quiet
  
```

BFR91A transient response			
TITLE	Released under GFDL		REVISION: 20081025
FILE	1	OR	DRAWN BY: Clock
PAGE	1	OF	1