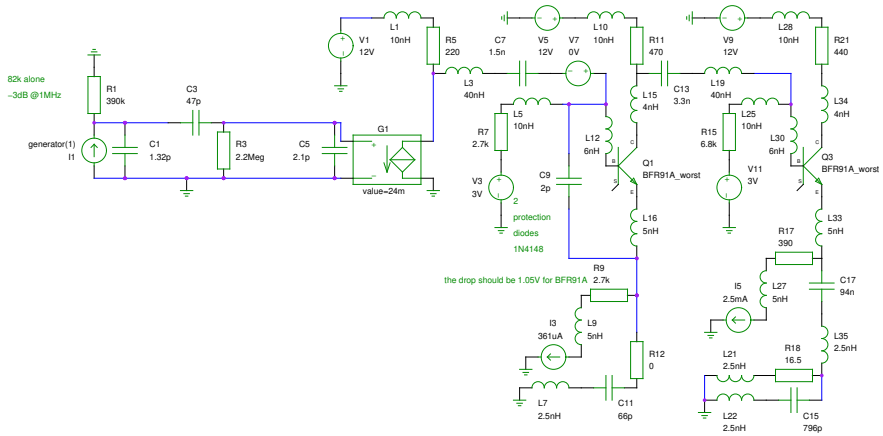

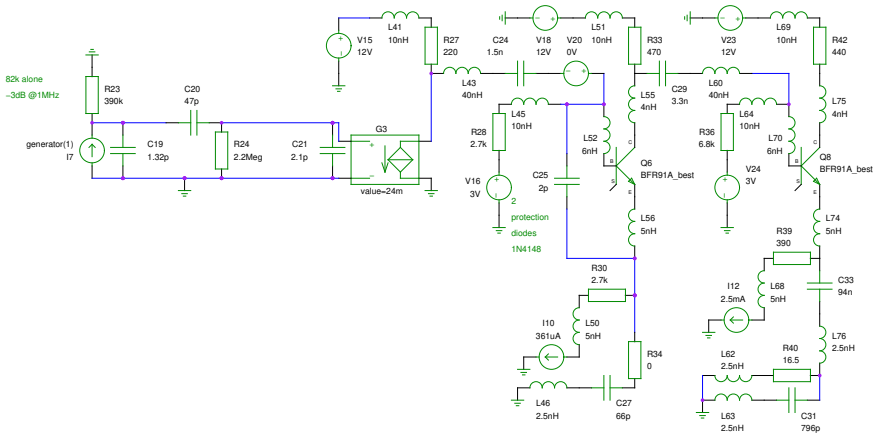

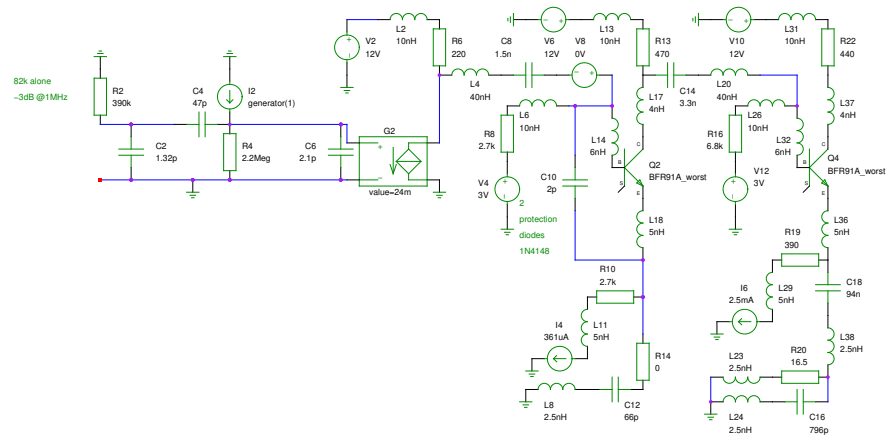

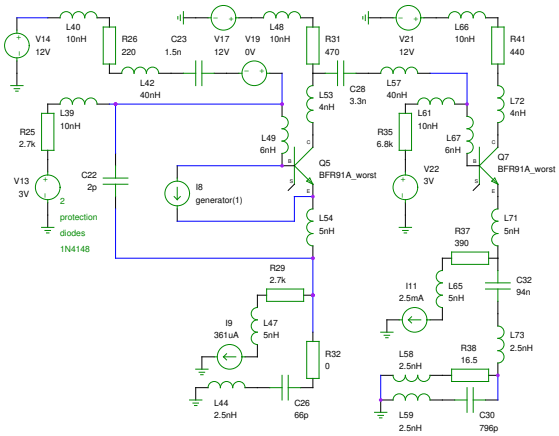

A1	Gnucap directive	.include sim/models/bfr90_worst.lib
A10	Gnucap directive	.include sim/models/bfr90_best.lib
A11	Gnucap directive	.include sim/models/bfr91_worst.lib
A12	Gnucap directive	.include sim/models/bfr91_best.lib
A13	Gnucap directive	.include sim/models/bfr91a_worst.lib
A2	Gnucap directive	.include sim/models/bfr91a_best.lib
A3	Gnucap options	numdgt=9 out=10000 clobber rstray
A4	Gnucap directive	.print ac imdb(L15) imdb(L55) ip(L15) ip(L55)
A5	Gnucap directive	.op
A6	Gnucap directive	.ac 11k 9.5G Dec 50 >sim/frontend.data Basic Quiet
A7	Gnucap directive	.print ac im(C3) im(G1) im(C7) im(L15) im(G2) im(L53)
A8	Gnucap directive	.ac 10Meg >sim/frontend2.data Basic Quiet
A9	Gnucap directive	.ac 10Meg >sim/frontend2.data Basic Quiet

BFR90, 91, and 91A input stability

TITLE

FILE:	To be released under GFDL	REVISION:	20090220
PAGE	1 OF 1	DRAWN BY:	Clock