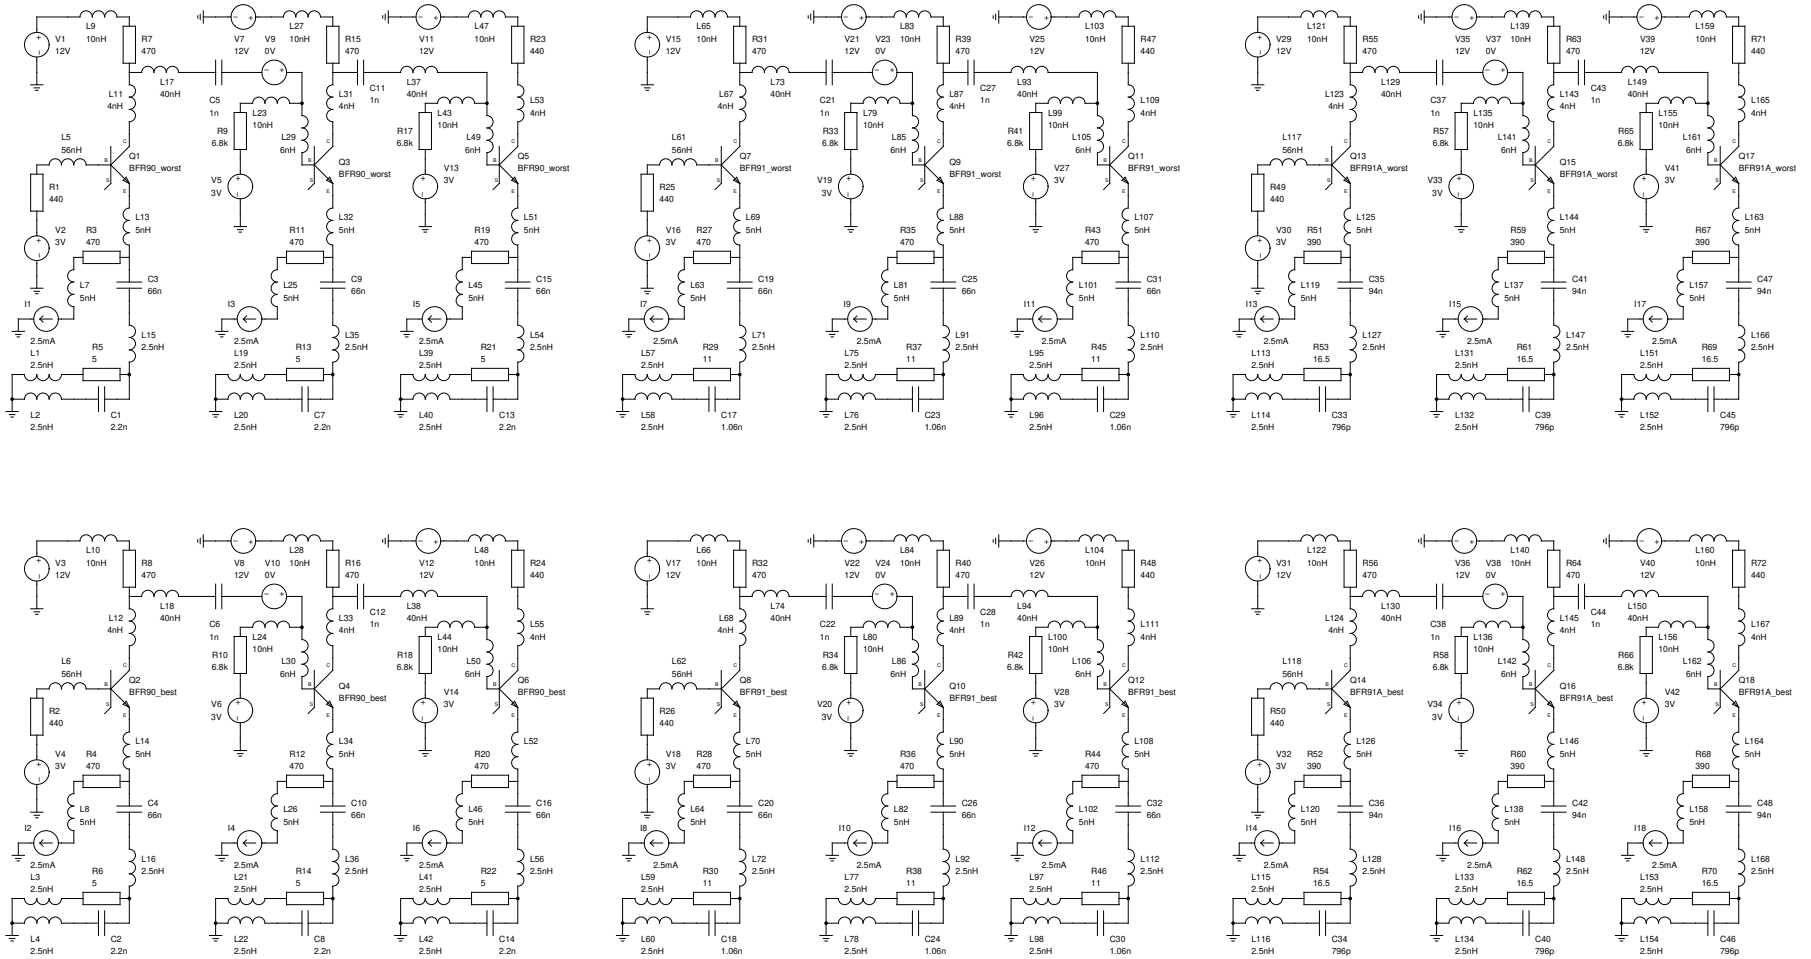

A1	Gnucap directive	.include sim/models/bfr90_worst.lib
A2	Gnucap directive	.include sim/models/bfr91_worst.lib
A3	Gnucap directive	.include sim/models/bfr91_best.lib
A4	Gnucap directive	.include sim/models/bfr91a_worst.lib
A5	Gnucap directive	.include sim/models/bfr91a_best.lib
A6	Gnucap options	numdgt=9 out=10000 clobber rstray
A7	Gnucap directive	.print ac zr(V9) zr(V10) zr(V23) zr(V24) zr(V37) zr(V38) zi(V9) zi(V10) zi(V23) zi(V24) zi(V37) zi(V38)
A8	Gnucap directive	.op
A9	Gnucap directive	.ac 150k 9.9G Dec 50 >sim/stab90.data Basic Quiet
A10	Gnucap directive	.include sim/models/bfr90_best.lib

BFR90, 91, and 91A input stability

TITLE			
FILE:	To be released under GFDL	REVISION:	20081024
PAGE	1 OF 1	DRAWN BY:	Clock