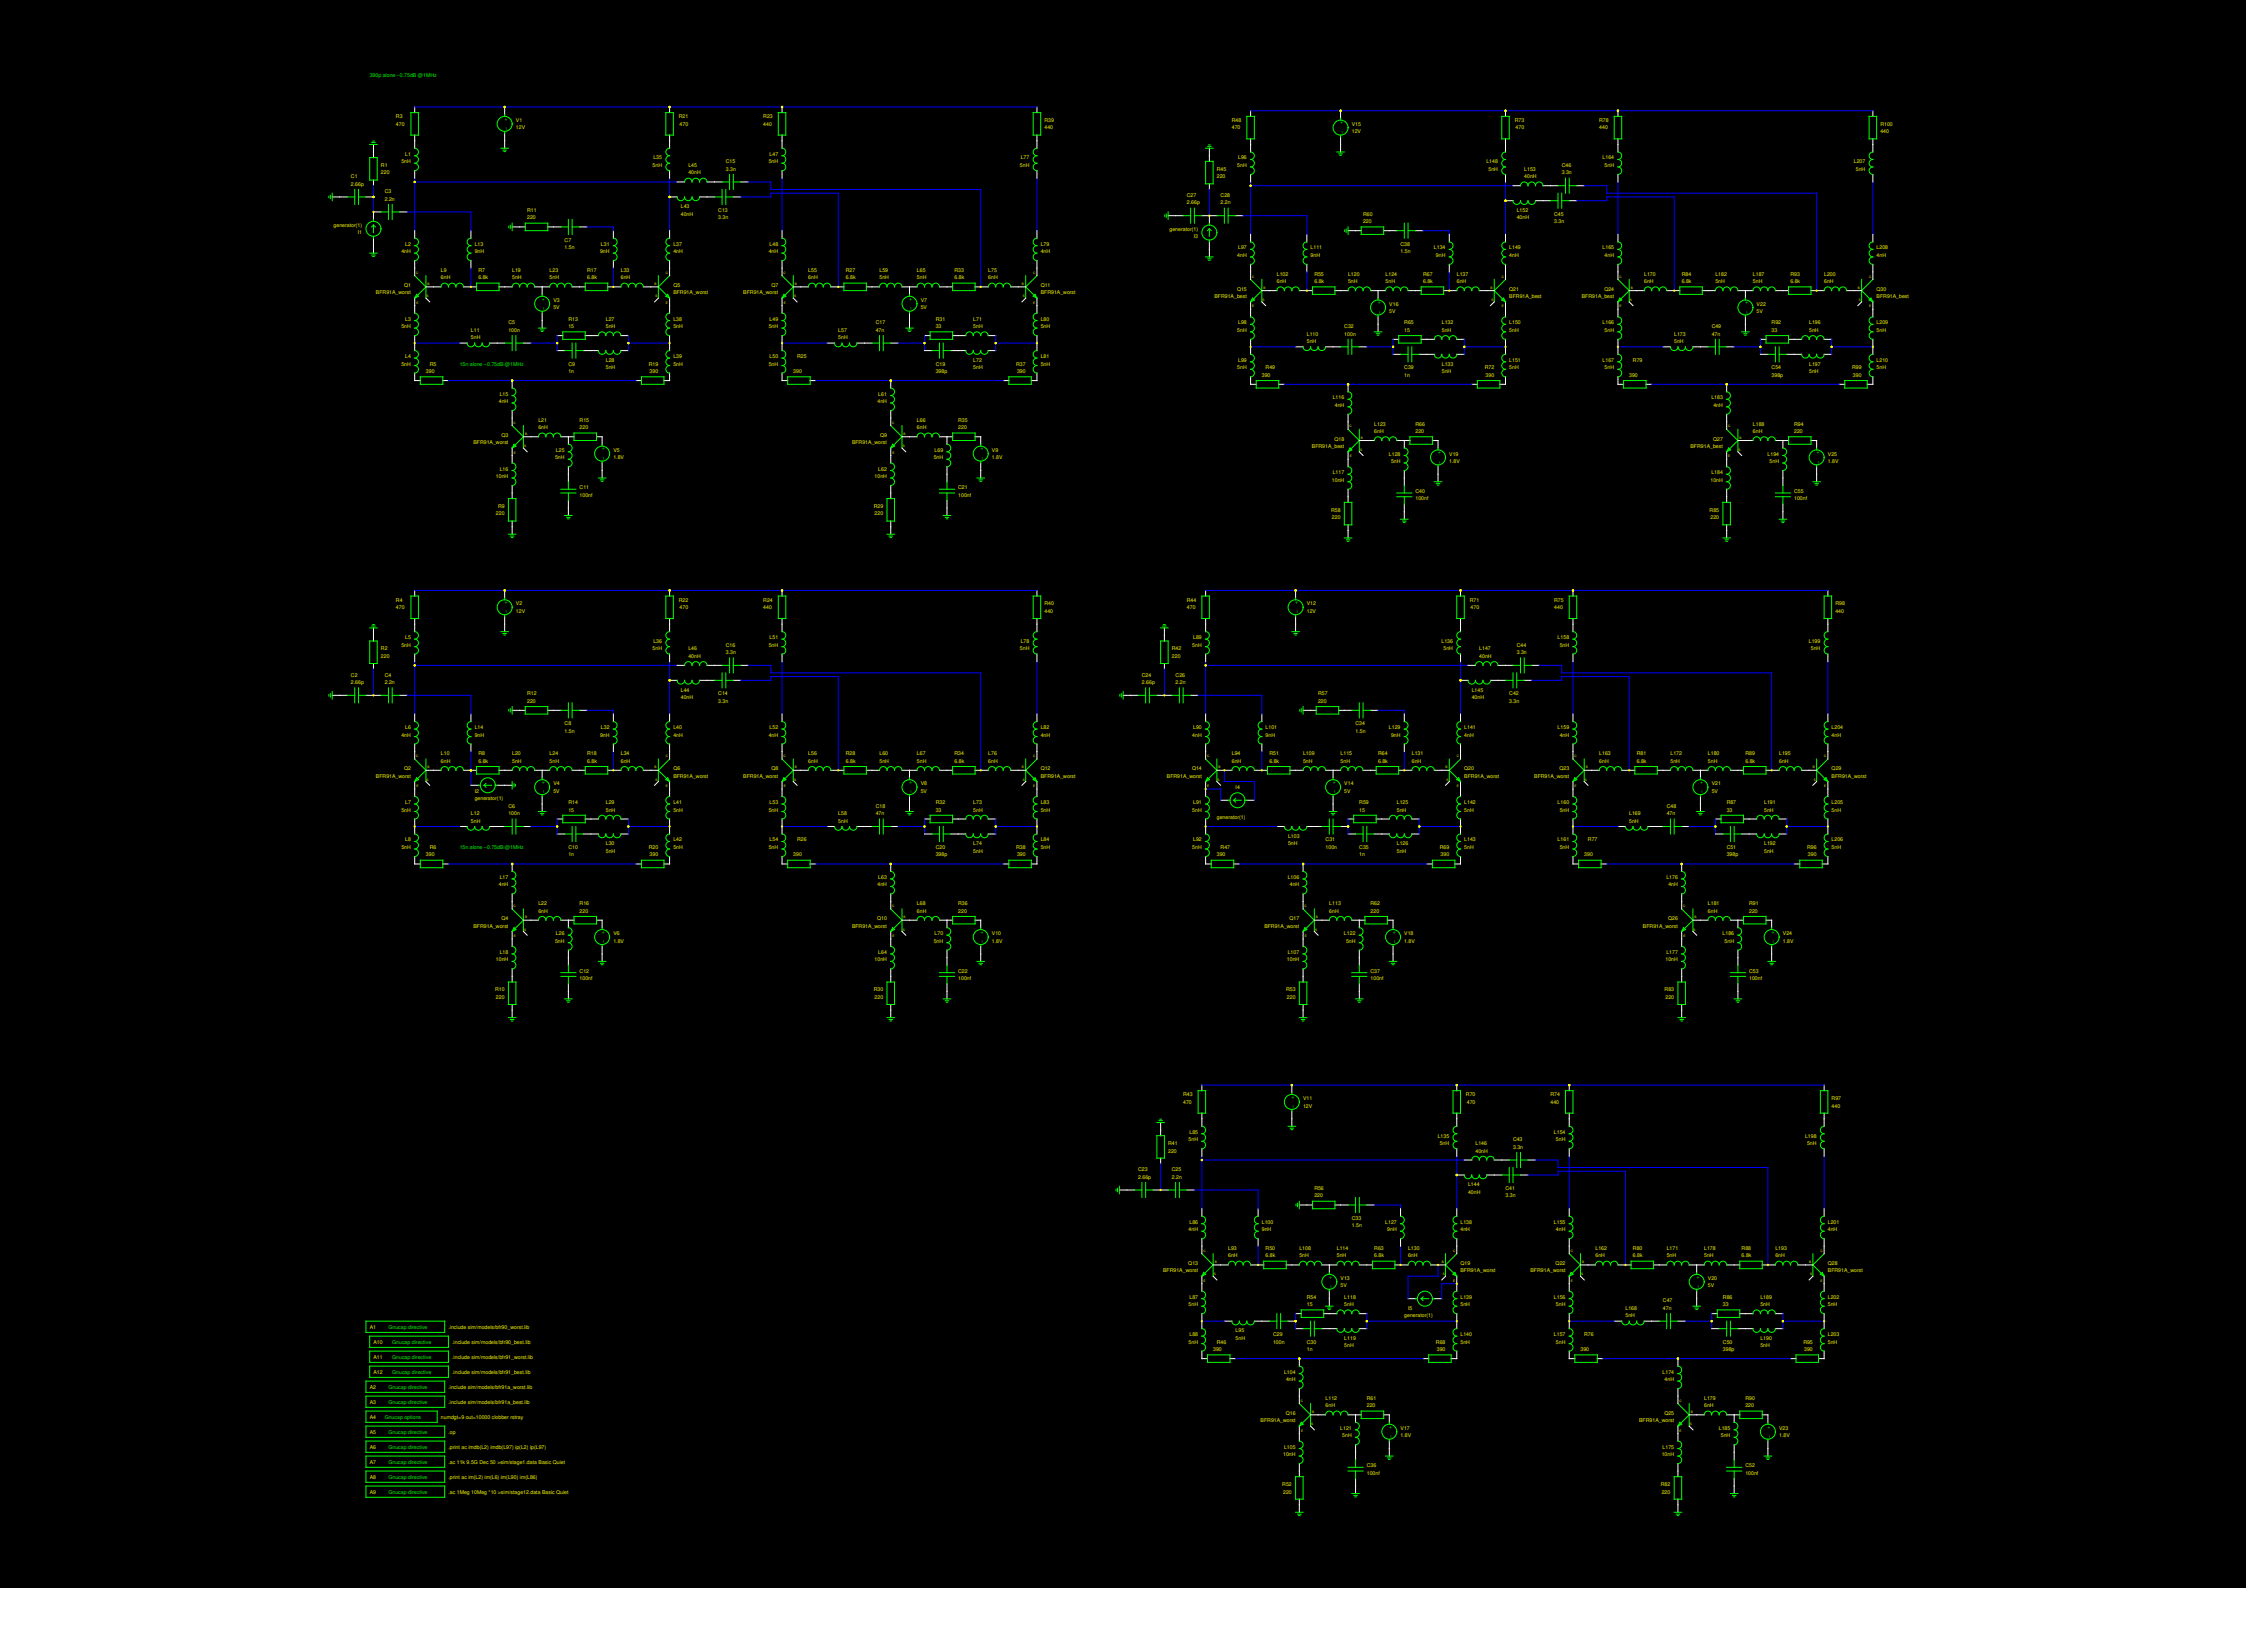
A1 Gnucap directive include sim/models/bh90_worst.lib
A10 Gnucap directive include sim/models/bh90_best.lib
A11 Gnucap directive include sim/models/bh91_worst.lib
A12 Gnucap directive include sim/models/bh91_best.lib
A2 Gnucap directive include sim/models/bh91a_worst.lib
A3 Gnucap directive include sim/models/bh91a_best.lib
A4 Gnucap options numdgt=9 out=10000 cktditer nstep
A5 Gnucap directive .op
A6 Gnucap directive print ac im(b12) im(b197) ip(L2) ip(L97)
A7 Gnucap directive .ac 1 fs 9 SG Dec 50 +sim/stage1.data Basic Quiet
A8 Gnucap directive print ac im(L2) im(L6) im(L60) im(L66)
A9 Gnucap directive .ac 1Meg 10Meg *10 +sim/stage12.data Basic Quiet