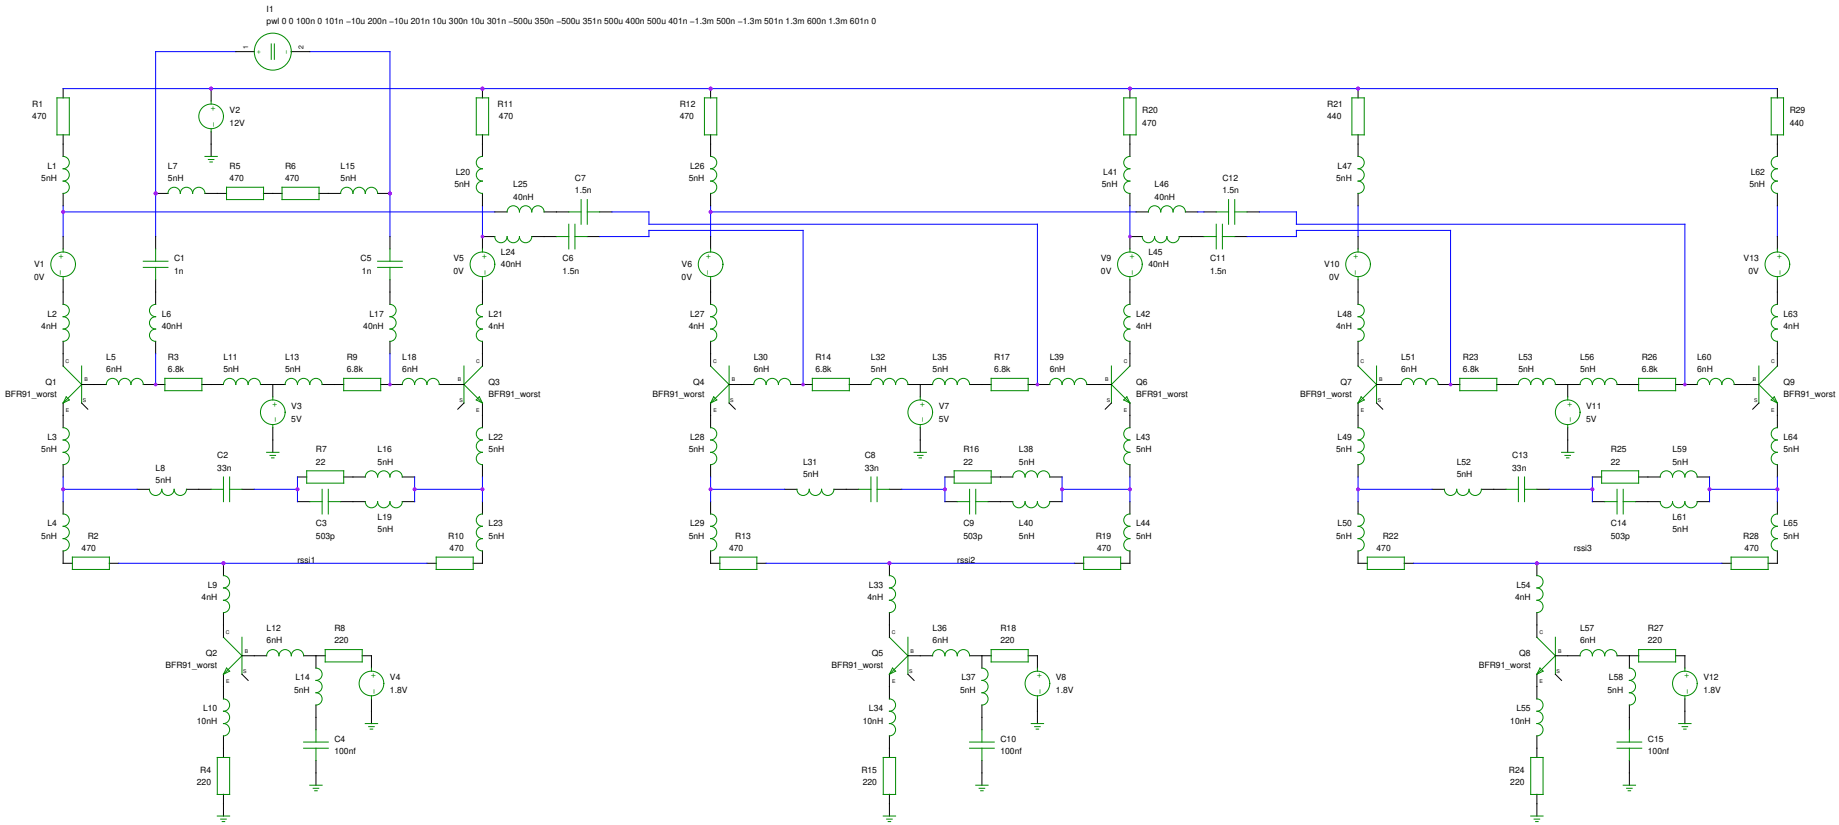

A1	Gnucap directive	.include sim/models/bfr91_worst.lib
A2	Gnucap options	numdgt=9 out=10000 clobber rstray
A3	Gnucap directive	.print tran i(I1) v(I1) i(V1) i(V5) i(V6) i(V9) i(V10) i(V13) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29)
A4	Gnucap directive	.op
A5	Gnucap directive	.transient 0 1u 100p skip 10 >sim/tran91.data Basic Quiet

BFR91 transient response

TITLE			
FILE:	Released under GFDL	REVISION:	20081024
PAGE	1 OF 1	DRAWN BY:	Clock