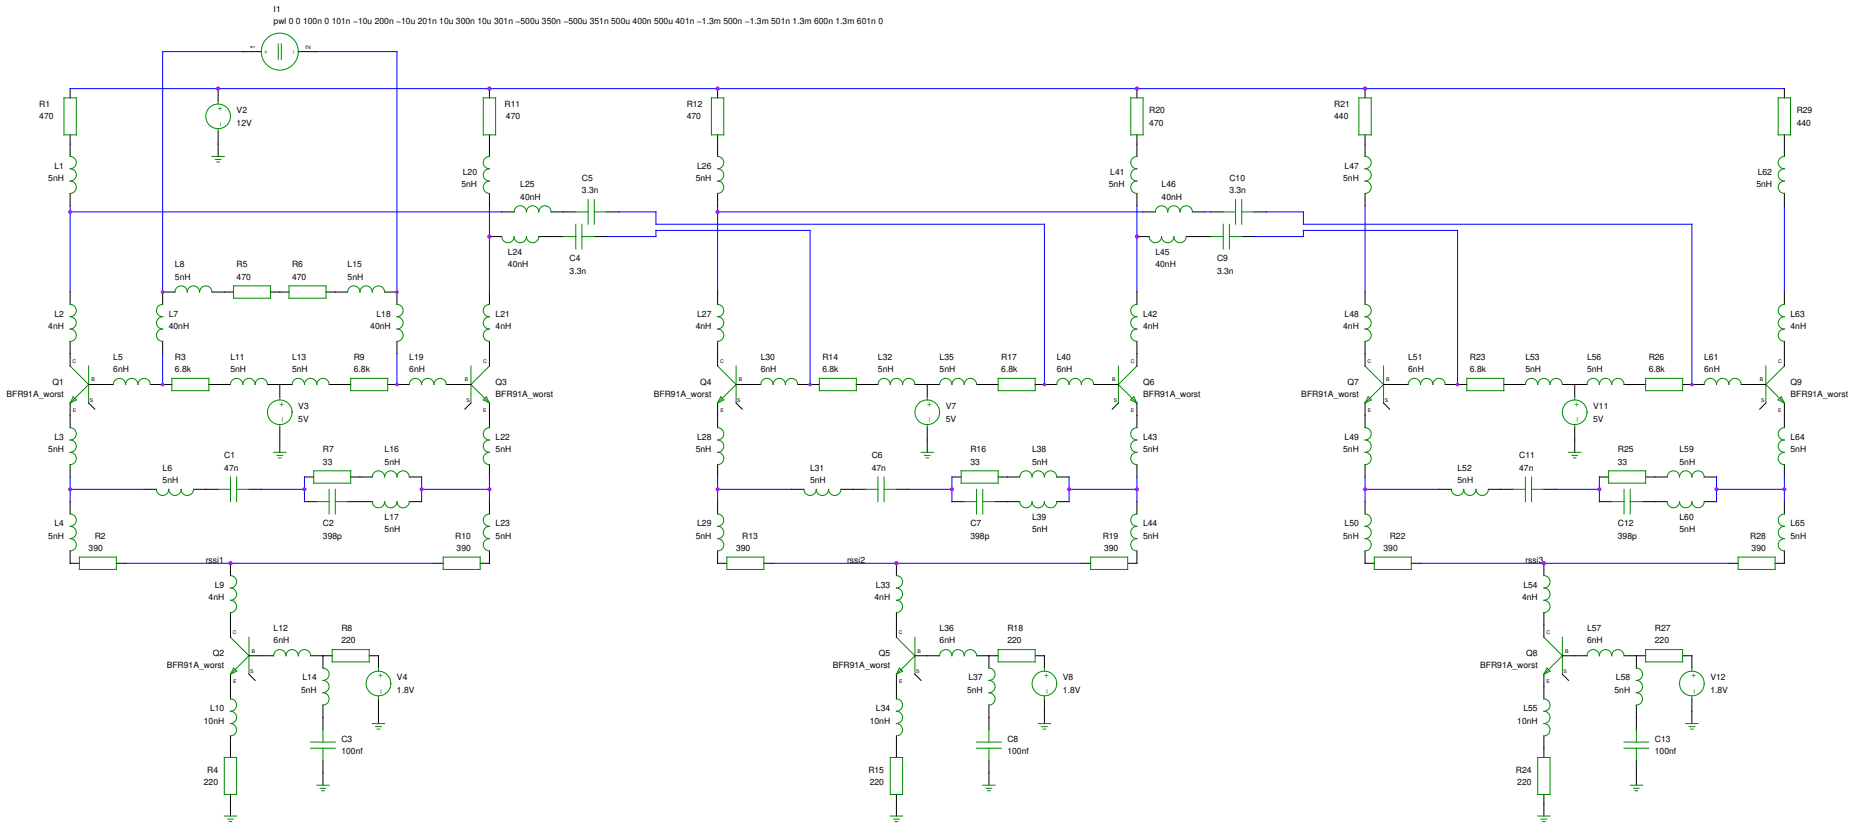

A1	Gnucap directive	.include sim/models/bfr91a_worst.lib
A2	Gnucap options	numdgt=9 out=10000 clobber rstray
A3	Gnucap directive	.print tran i(I1) v(I1) ic(q1) ic(q3) ic(q4) ic(q6) ic(q7) ic(q9) V(R1) V(R11) V(R12) V(R20) V(R21) V(R29) V(rssi1) V(rssi2) V(rssi3)
A4	Gnucap directive	.op
A5	Gnucap directive	.transient 0 1u 100p skip 10 >sim/tran91a.data Basic Quiet

BFR91A transient response

TITLE			
FILE:	Released under GFDL	REVISION:	20081025
PAGE	1 OF 1	DRAWN BY:	Clock