RONJA

Wire Stub Geometry

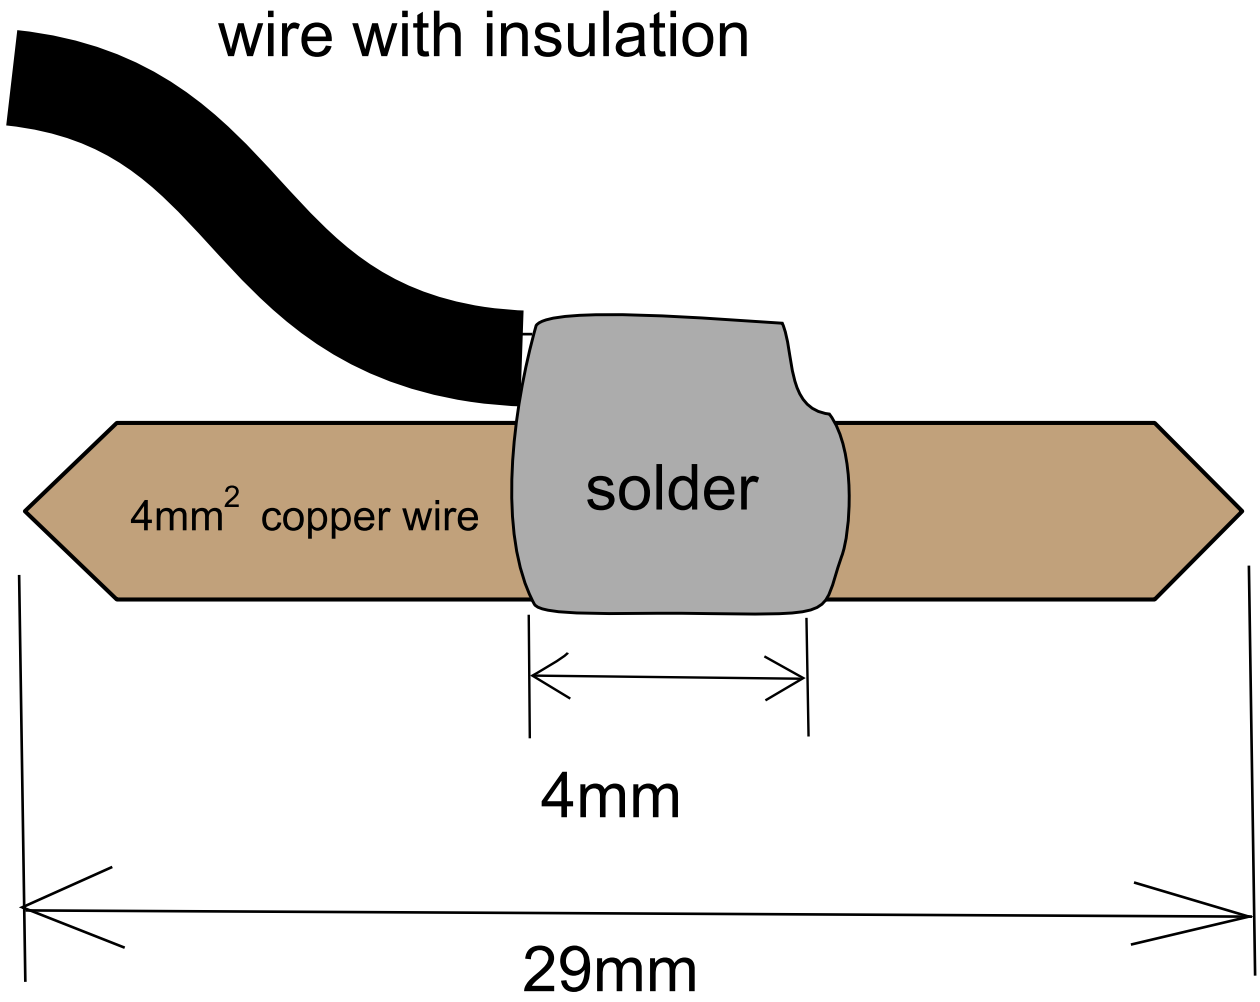

Apply insulating tape in this direction

end start