DIODE

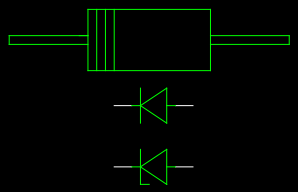

HPWT-??00



Cathode of LED1 must be soldered near LED case to metal of the case to ensure proper cooling.

LM7805



BC547



Match gains of both transistors to get better performance

2N3904

2N2222

Match gains of both transistors to get better performance

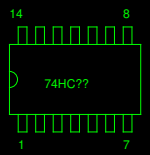

With signal at CON1		
	AC	DC
P1	600mVpp...700mVpp	0V
P2	600mVpp...700mVpp	P8-0.1V...P8
P3	0mVpp...100mVpp	P8-0.8V...P8-0.5V
P4	0mVpp...40mVpp	P8-0.1V...P8
P5	4V...4.4Vpp	P9-2.2V...P9-2.0V
P6	P8/2-0.4...P8/2+0.1Vpp	P8/2-0.1V...P8/2+0.1V
P7	124mA...136mApp	62mA...68mA
P8	0...50mVpp	4.8V...5.2V
P9	0...20mVpp	11.5V...12.5V

Without signal at CON1		
	AC	DC
P1	0V	0V
P2	0V	P8-0.1V...P8
P3	0V	P8-0.8V...P8-0.6V
P4	0V	P8-0.1V...P8
P5	0V	P9-4.4V...P9
P6	0V	P8-0.2V...P8
P7	0mA	0mA
P8	0V	4.8V...5.2V
P9	0V	11.5V...12.5V

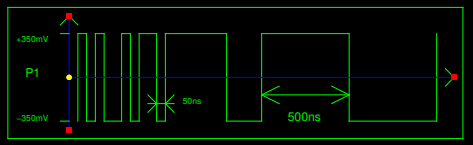

U4 must be screwed to the metalic case to prevent overheating.

stub for gsch2pcb
to connect up +5V traces correctly

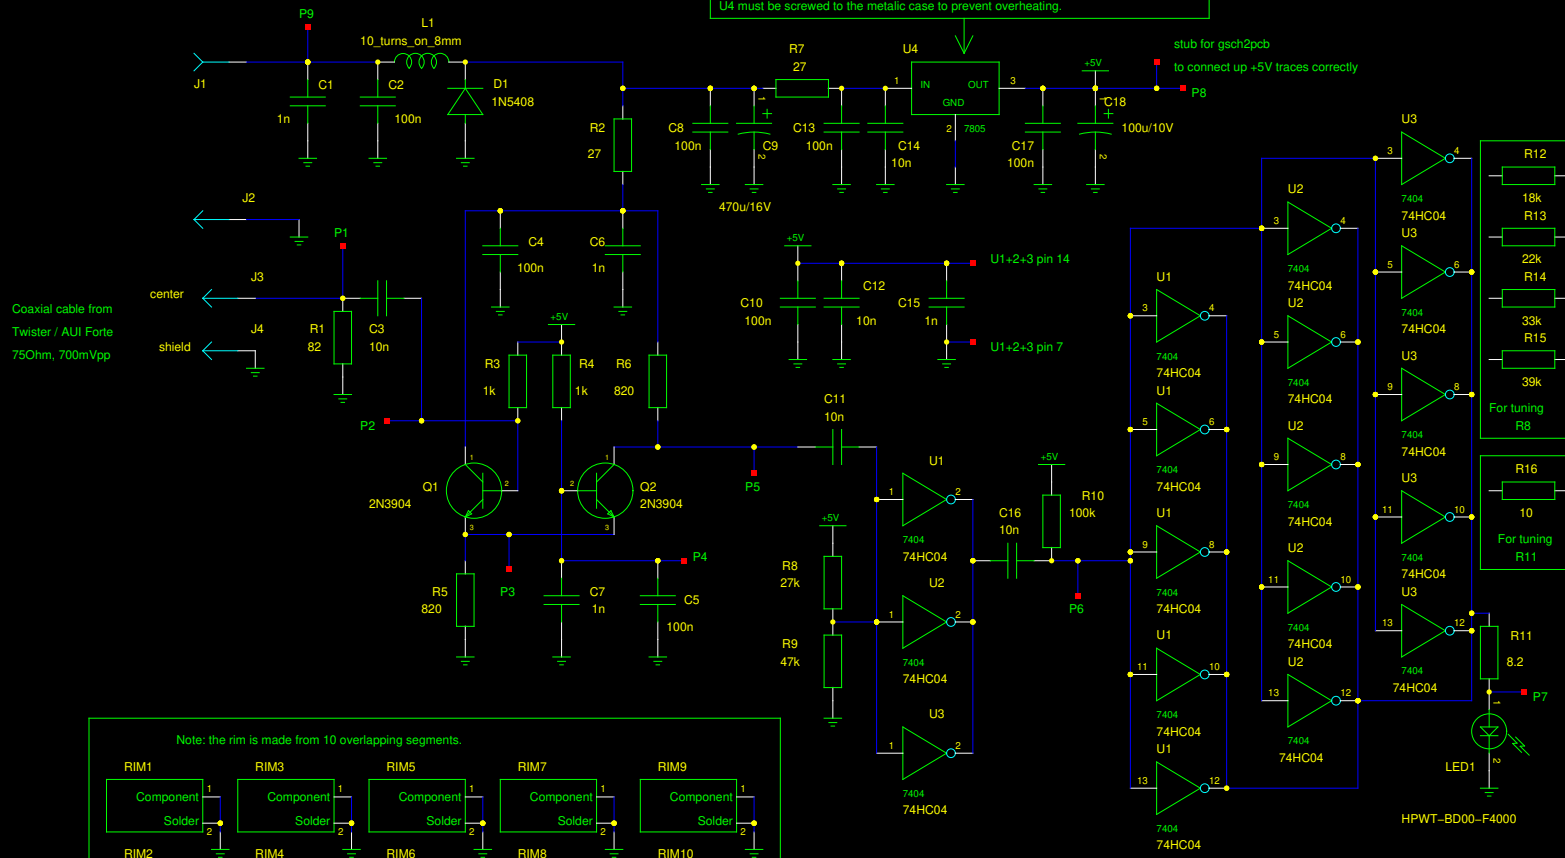

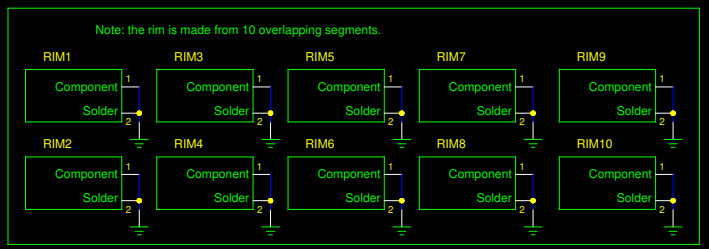

The shielding lid must have many contact flaps.

Ronja 10M Metropolis Transmitter

TITLE			
FILE:	licensed under GPL	REVISION:	March 28, 2005
PAGE	1 OF 1	DRAWN BY:	Clock