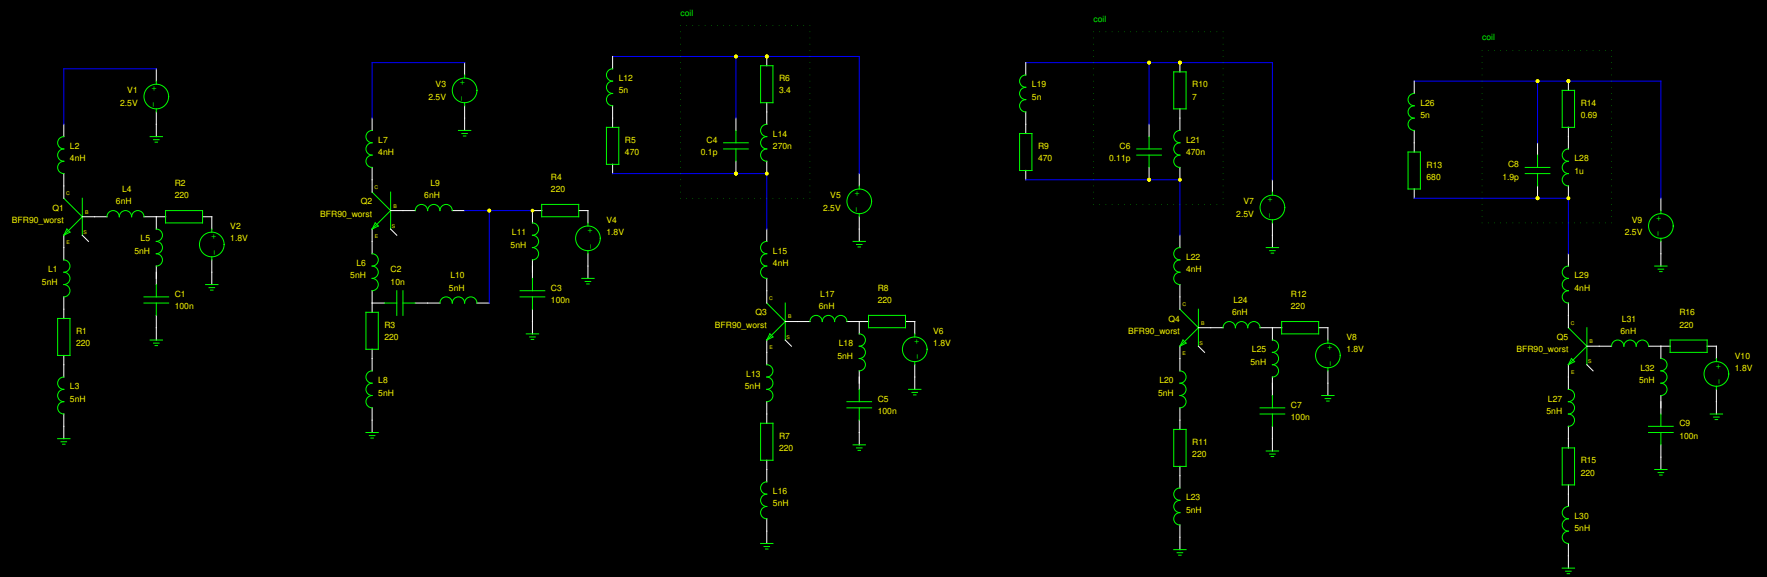

A1	Gnucap directive	.include sim/models/bfr90_worst.lib
A2	Gnucap directive	.include sim/models/bfr91_worst.lib
A3	Gnucap directive	.include sim/models/bfr91_best.lib
A4	Gnucap directive	.include sim/models/bfr91a_worst.lib
A5	Gnucap directive	.include sim/models/bfr91a_best.lib
A6	Gnucap options	numdgt=9 out=10000 clobber rstray
A7	Gnucap directive	.print ac zr(V1) zr(V3) zm(V1) zm(V3) zm(V5) zm(V7) zm(V9)
A8	Gnucap directive	.op
A9	Gnucap directive	.ac 11k 9.5G Dec 100 >sim/current.data Basic Quiet
A10	Gnucap directive	.include sim/models/bfr90_best.lib

Current Source Output Impedance

TITLE

FILE:	To be released under GFDL	REVISION:	20081007
PAGE	1 OF 1	DRAWN BY:	Clock